Warning

Please ensure that the small metal spacers that are used with the bolts that hold the tank in place are fitted. These spacers stop the tank from being crushed when the mounting bolts are tightened up (DO NOT OVER TIGHTEN). If there is a risk of the lugs getting pulled when tightening, fit penny or plate washers against the side panel first (DO NOT ALLOW LUGS TO BE PULLED BY THE BOLTS), failure to use spacers will cause the tank to fail and leak prematurely.

Any cracks in the tank area highlighted by arrows in attached pictures will render any warranty void on the tank!

PTO for diagram

